



---

## ***Home Contents of the C2C Module***

**T**his document lists the detailed content of the C2C Module.

### ***Table of Contents***

<b>Document 1</b>	<b>C2C Overview</b>	<b>1-1</b>
Section 1.1	Function	1-1
Section 1.2	Scenario	1-1
Section 1.2.1	Problem	1-1
Section 1.2.2	Solution	1-1
Section 1.3	Network Support	1-2
Section 1.4	Features	1-2
<b>Document 2</b>	<b>C2C Office Set-Up Guide</b>	<b>2-1</b>
Section 2.1	Checking the Parts	2-1
Section 2.2	Installing the Hardware	2-2
<b>Document 3</b>	<b>C2C Configuration Guide</b>	<b>3-1</b>
Section 3.1	Before Configuration	3-1
Section 3.2	Communication with the C2C	3-2
Section 3.2.1	Using a DOS Command	3-2
Section 3.2.2	Using a Terminal Emulation Routine	3-3
Section 3.2.3	Logging In to the C2C Software	3-4
Section 3.3	C2C Configuration	3-5
Section 3.3.1	Configuring the C2C's Ethernet Port	3-6
Section 3.3.2	Configuring the C2C's Modem Port	3-9
Section 3.3.2.1	Using a Quick Configuration for the C2C Software	3-9
Section 3.3.2.1.1	C2C QuickStart Configuration Using PPP	3-10
Section 3.3.2.1.2	C2C QuickStart Configuration Using Telnet	3-14
Section 3.3.2.2	Using a Standard Configuration for the C2C Software	3-20
Section 3.3.2.3	System Name and IP Address QuickStart Parameters	3-23
Section 3.3.2.4	Configuring the Wireless Port Cellular Card	3-25

Section 3.3.2.5	Configuring the RJ11 Modem Port for PPP	3-27
Section 3.3.2.6	Configuring the RJ11 Modem Port for Telnet	3-30
Section 3.3.2.7	Preparing the Network Address Translation Profile	3-36
Section 3.3.3	Saving and Using the New Configuration	3-40
Section 3.3.3.1	What to Do If You See an Error Message While Saving the C2C Configuration	3-41
Section 3.4	Statistics for the Modem Ports	3-43
<b>Document 4</b>	<b>C2C Power-Loss Alarm</b>	<b>4-1</b>
Section 4.1	Configuring SNMP Use in a BANDIT Device	4-1
Section 4.2	Enabling Configured Alarms	4-5
<b>Document A</b>	<b>C2C Hardware Description and Specifications</b>	<b>A-1</b>
Section A.1	C2C Chassis Hardware Description	A-1
Section A.1.1	Power Supply	A-2
Section A.1.2	Ports	A-2
Section A.1.2.1	Modem Ports	A-2
Section A.1.2.2	Standard Network Ports	A-3
Section A.1.2.2.1	Ethernet Port	A-3
Section A.1.2.2.2	Wireless Port	A-3
Section A.1.3	C2C LEDs	A-3
Section A.2	C2C Specifications	A-4
Section A.2.1	Physical Specifications	A-5
Section A.2.2	Ports and Pin Configurations	A-5
Section A.2.2.1	RJ11 Modem Port	A-6
Section A.2.2.2	RJ45 10-Base-T/100-Base-T Ethernet Port	A-6
Section A.2.3	Power	A-7
Section A.2.4	Environmental Specifications	A-7
Section A.2.5	Compliance	A-8
Section A.3	Ventilation for BANDIT Products	A-8

## ***List of Tables***

<b>Document 2</b>	<b>C2C Office Set-Up Guide</b>	
Table 2-1	C2C Parts List	2-1
<b>Document A</b>	<b>C2C Hardware Description and Specifications</b>	
Table A-1	C2C General Status LED Definitions	A-4
Table A-2	C2C Physical Specifications	A-5
Table A-3	C2C Physical Interfaces and Connectivity	A-5
Table A-4	RJ11 Modem Port Pin Configuration	A-6

Table A-5	RJ45 10-Base-T/100-Base-T Ethernet Port Pin Configuration	A-7
Table A-6	C2C Power Specifications	A-7
Table A-7	C2C Environmental Specifications	A-7
Table A-8	C2C Standards Compliance	A-8

## ***List of Figures***

### **Document 1 C2C Overview**

Figure 1-1	Telephone Using Landline Connection over the PSTN to Call Service Host	1-1
Figure 1-2	Telephone Using C2C Wireless Connection for VOIP Call to Service Host	1-2

### **Document 2 C2C Office Set-Up Guide**

Figure 2-1	Antenna	2-2
Figure 2-2	Back of C2C Chassis	2-2
Figure 2-3	Side View of C2C, Antenna Bent to Vertical	2-2
Figure 2-4	Back View of C2C with Antenna Attached	2-2
Figure 2-5	RJ45 Ethernet Port and RJ11 Modem Port on Back of C2C	2-3
Figure 2-6	AC Power Port on Back of C2C	2-3

### **Document 3 C2C Configuration Guide**

Figure 3-1	Message That Connection Cannot Reach the C2C	3-2
Figure 3-2	Selecting the Command to Run Windows DOS	3-2
Figure 3-3	Entering the DOS Telnet Connection Command	3-3
Figure 3-4	Selecting the Properties Command in the Terminal Emulator	3-3
Figure 3-5	Selecting the Communication Protocol in the Terminal Emulator	3-3
Figure 3-6	Setting the IP Connection Parameters in the Terminal Emulator	3-3
Figure 3-7	Establishing the Telnet Connection from the Terminal Emulator	3-4

### **Document A C2C Hardware Description and Specifications**

Figure A-1	C2C Chassis, Front	A-1
Figure A-2	C2C Chassis, Rear	A-1
Figure A-3	Pin Locations for Female RJ11 Modem Port	A-6
Figure A-4	Pin Locations for Female RJ45 Ethernet Port	A-7

